


# FRONT FORK SPRING KIT

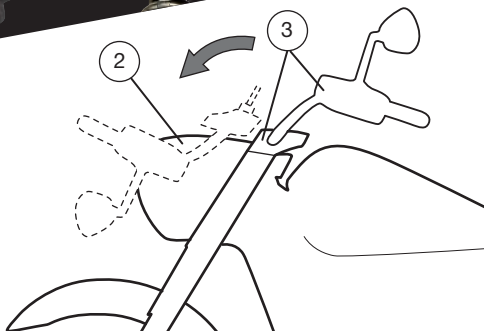

## YAMAHA XV1900A MIDNIGHT STAR

### ⚠ WARNING!

It is advisable to have an Öhlins dealer install the springs. Consult your vehicle service manual when installing this product.



- 1 Put the motorcycle on a workstand so that the front wheel barely touches the ground.

### ⚠ WARNING!

Make sure that the vehicle is securely supported so that it will not tip.

- 2 Loosen the cover on the headlight.
- 3 Loosen the clamps and gently lift the handle bar with clamps forward so it will rest on the headlight. Put a blanket on the headlight to protect the finish.
- 3 Remove the cover for the upper triple clamp.
- 4 Remove the top cap, original spacer, washer and fork spring. *Note! You will **not** need the original spacer, washer or spring for the installation of the Öhlins front fork spring.*
- 5 Check the oil level and the quality of the oil (with the front fork fully compressed and no springs installed).

Recommended oil level: 140 mm

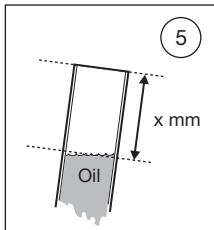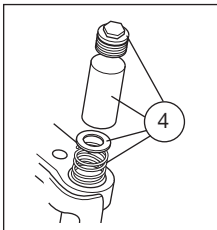


- 6 Install the Öhlins spring (tighter wound coils to the top), the spacer (if any; there are two options given here below) and finally the top cap (with the front fork fully extended).


6



### Standard ride height

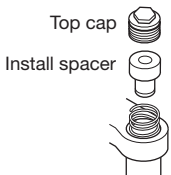

### 25 mm lowered ride height

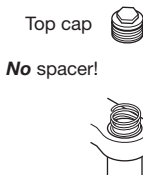

- 7 Reinstall all parts in the same way as before the installation.

Spring kit 08851-01 20070910

Öhlins Racing AB, Box 722,  
S-194 27 Upplands Väsby, Sweden  
Phone +46 8 590 025 00, Fax +46 8 590 025 80,  
E-mail: info@ohlins.se, [www.ohlins.com](http://www.ohlins.com)

Part no. 01200-05

