

Setup data

•	
Lenght	444 mm
Stroke	127,5 mm
Rebound adjustment	22 clicks
Compression adjustment	15 clicks
High speed comp. adj	2 1/2 turns
Preload	10 mm
Free sag, rear	35 mm
Ride height, rear	100 mm
Front fork position	0 mm
(top surface above triple clamp)	
Front fork adjustment	std.

std.

Recommended fork springs

Checking sag and ride height

Front suspension	
F1. Bike on a stand with the suspension fully extended	=
F2. Bike on the ground without ride	r =
F3. Bike on the ground with rider	=
Free sag F1 - F	2 =
Ride height F1 - F	3 =

Rear suspension		
R1. Bike on a stand with the suspension fully extend		=
R2. Bike on the ground with	nout rider	=
R3. Bike on the ground with	ı rider	=
Free sag	R1 - R2	! =
Ride height	R1 - R3	=

NOTE!

If ride height is higher than recommended, softer spring/springs must be used. If ride height is lower than recommended, harder spring/springs must be used. Contact your Öhlins dealer for advice.


HA 192. Issued 01 11 29



Öhlins Racing AB, Box 722, S-194 27 Upplands Väsby, Sweden. Phone +46 8 590 025 00. Fax +46 8 590 025 80. www.ohlins.com

Owners Manual

Mounting instructions Öhlins shock absorber kit HA 192 for Husqvarna CR 250

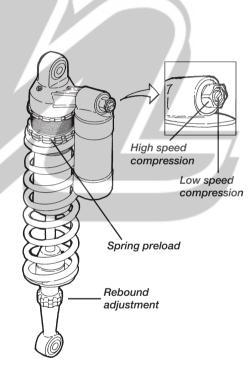

Your Öhlins shock absorber type 46 PRC features the followinging adjusters:

Compression damping:

Adjustments are made on top of the reservoir. Low speed adjustments: Slotted centre screw High speed adjustments: Hexagon screw.

Rebound damping

Adjuster whell on the piston shaft above the end bracket. Spring preload

Adjustment made by screws om cylinder house.

Use C-spanner.

When delivered the Öhlins shock absorber is dialed to recommended settings for the specific brand and make of the motorcycle. If you have changed the setting check like this:

The adjusters have a normal right hand tread. Turn clockvise to fully closed. Turn counter clockvise to open and count the clicks until you reach the recommended number of clicks.

Do not use to much force, delicate sealing surfaces can be damaged. Do use fingers only.



Safety signals

Important information concerning safety is distinguished in this manual by the following notations:



The Safety alert symbol means: Caution! Your safety is involved.



Failure to follow warning instructions could result in **severe or fatal injury** to anyone working with, inspecting or using the suspension, or to bystanders.

CAUTION!

Caution indicates that special precautions must be taken to avoid damage to the suspension.

NOTE!

This indicates information that is of importance with regard to procedures.

Before installation

Öhlins Racing AB can not be held responsible for any damage whatsoever to shock absorber or vehicle, or injury to persons, if the instructions for fitting and maintenance are not followed exactly.

Similarly, the warranty will become null and void if the instructions are not adhered to.

A WARNING!

- 1. Installing a shock absorber, that is not approved by the vehicle manufacturer, may affect the stability of your vehicle. Öhlins Racing AB cannot be held responsible for any personal injury or damage whatsoever that may occur after fitting the shock absorber. Contact an Öhlins dealer or other qualified person for advice.
- Please study and make certain that you fully understand all the mounting instructions and the owners manuals before handling this shock absorber kit. If you have any questions regarding proper installation procedures, contact an Öhlins dealer or other qualified person.
- 3. The vehicle service manual must be referred to when installing the Öhlins shock absorber

Öhlins products are subject to continual improvement and development. Consequently, although these instructions include the most up-to-date information available at the time of printing, there may be minor differences between your suspension and this manual. Please consult your Öhlins dealer if you have any questions with regard to the contents of the manual.

NOTE!

During storage and transportation, especially at high ambient temperature, the oil and grease used for assembling may run out inside the packing and damage the expanded polystyrene packing material. This is not unusual and is in no way detrimental to the shock absorber.

Kit contents

Before installing the shock absorber, please check the contents of the kit, listed on the front page of this instruction. If anything is missing, contact your Öhlins dealer.

Description	Pcs.	Part No.
Shock absorber	1	HA 192
Sticker Öhlins	2	00197-01
Sticker memo notes	1	01180-01
C-spanner	1	00710-02
Owners manual	1	

Mounting instructions

1

Put the motorcycle on a stand so the rear wheel has ground clearance. Make sure it's steadily positioned and will not fall over.

A WARNING!


- 1. It's advisable to have an Öhlins dealer or other qualified person to fit your shock absorber.
- 2. Instructions in the vehicle service manual are to be followed when changing the shock absorber.
- 3. When working on a lifted vehicle it must be securely supported to prevent it from falling.






NOTE!

Make sure that all bolts are tightened to the correct torque and that nothing fouls the shock absorber when the suspension is being compressed. See: Motorcycle workshop manual.

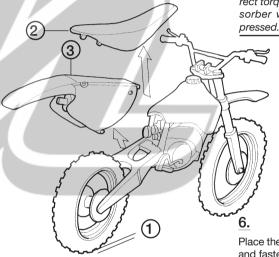



Position of the shock absorber, attached to the triangellink

Place the seat support and seat back in position and fasten them.

7.

Continue your work according to the Owners Manual, section Adjustments

NOTE!

Make sure that all bolts are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is being fully compressed or extended.

A WARNING!

Certain modifications may be necessary when installing the Öhlins shock absorber/suspension. It is essential that the mounting instructions are carefully followed.

2

Remove the seat by loosening the rear attachment screws.

3

Loosen the rear frame and the hose clamp from the air filter. Disconnect electrical wires. Remove the whole unit with air filter and muffler.

4

Loosen the lower and the upper attachment of the original shock absorber and remove it.

5

Fit the Öhlins shock absorber in the same way as the original unit. Fasten it by using the two original bolts.